

User manual

Floppy to USB emulator

Model:

SFR1M44-U100K code*: U01 142

Floppy driver with below function needed:

- Floppy driver with 34pin interface, and 5V DC power plug (example: SONY YE-DATA ALPS TEAC EPSON PANASONIC NEC)
- Use 2HD floppy disk with 1.44MB capacity
- Format of disk : Cylinders: 80 Tracks: 160 Sectors/Track: 18 Bytes/Sector: 512 Data transfer rate: 500 kbps Encoding method: MFM.

Features:

- Use normal usb flash drive as the medium for transfer design.
- 34pin floppy driver interface, 5V DC power supply, easy to install.
- Capacity: 1.44MB 2HD Cylinders: 80 Tracks: 160 Sectors/Track: 18 Bytes/Sector: 512 Data transfer rate: 500 kbps Encoding method: MFM.
- 1000pcs partitions in usb flash drive can be used.
- Built-in self-format function. (read relevant documents to use this function)

Panel:



8segment numbers: represent partitions number

Green led: status of read and write operation

USB port: connect usb flash drive

Button:

Left button used to rise ten-digit, right button used to rise single-digit, press 2 button together to rise hundred-digit.

Operation :

- **Format usb flash drive.**
 1. use built-in self-format function to format usb flash drive into 1000pcs partitions.
 2. use software in CD format usb flash drive under WINDOWS XP/2000, into 000-099 100pcs partitions.
 3. install an emulator on computer, and format every partitions by operate driver A:.
 4. use emulator UFA1M44-100, plug usb flash drive on it, connect to computer, it will

recognized as removable driver A: or B: under WINDOWS XP/2000/7, format every partitions.
UFA1M44-100 also built in self-format function.

● **Read and write data.**

1. install emulator on machine
2. install emulator on computer
3. connect usb flash drive on computer, read and write data directory by software, under WINDOWS XP/2000
4. use emulator UFA1M44-100, plug usb flash drive on it, connect to computer, read and write data under WINDOWS XP/2000/7.

Jumper setting: (SFR1M44-U100K)

J5: ---

JA: ---


JC: ---

JB: ---

S0: Driver select 0

S1: Driver select 1

MO: Motor

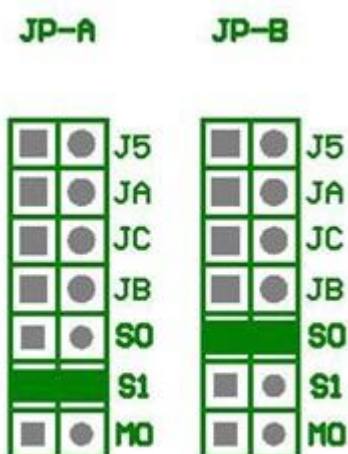

Firmware version of emulator:

Keep pressed 2 button together , power on , 8segment numbers will display firmware version and data of emulator to detect different model.

Error code:

E0: no specified file in usb flash drive

E16: built-in memory fault